



## SPARE PARTS DRAWING AND LIST

Spare parts are available from the European Spare Parts Centre in Brussels:

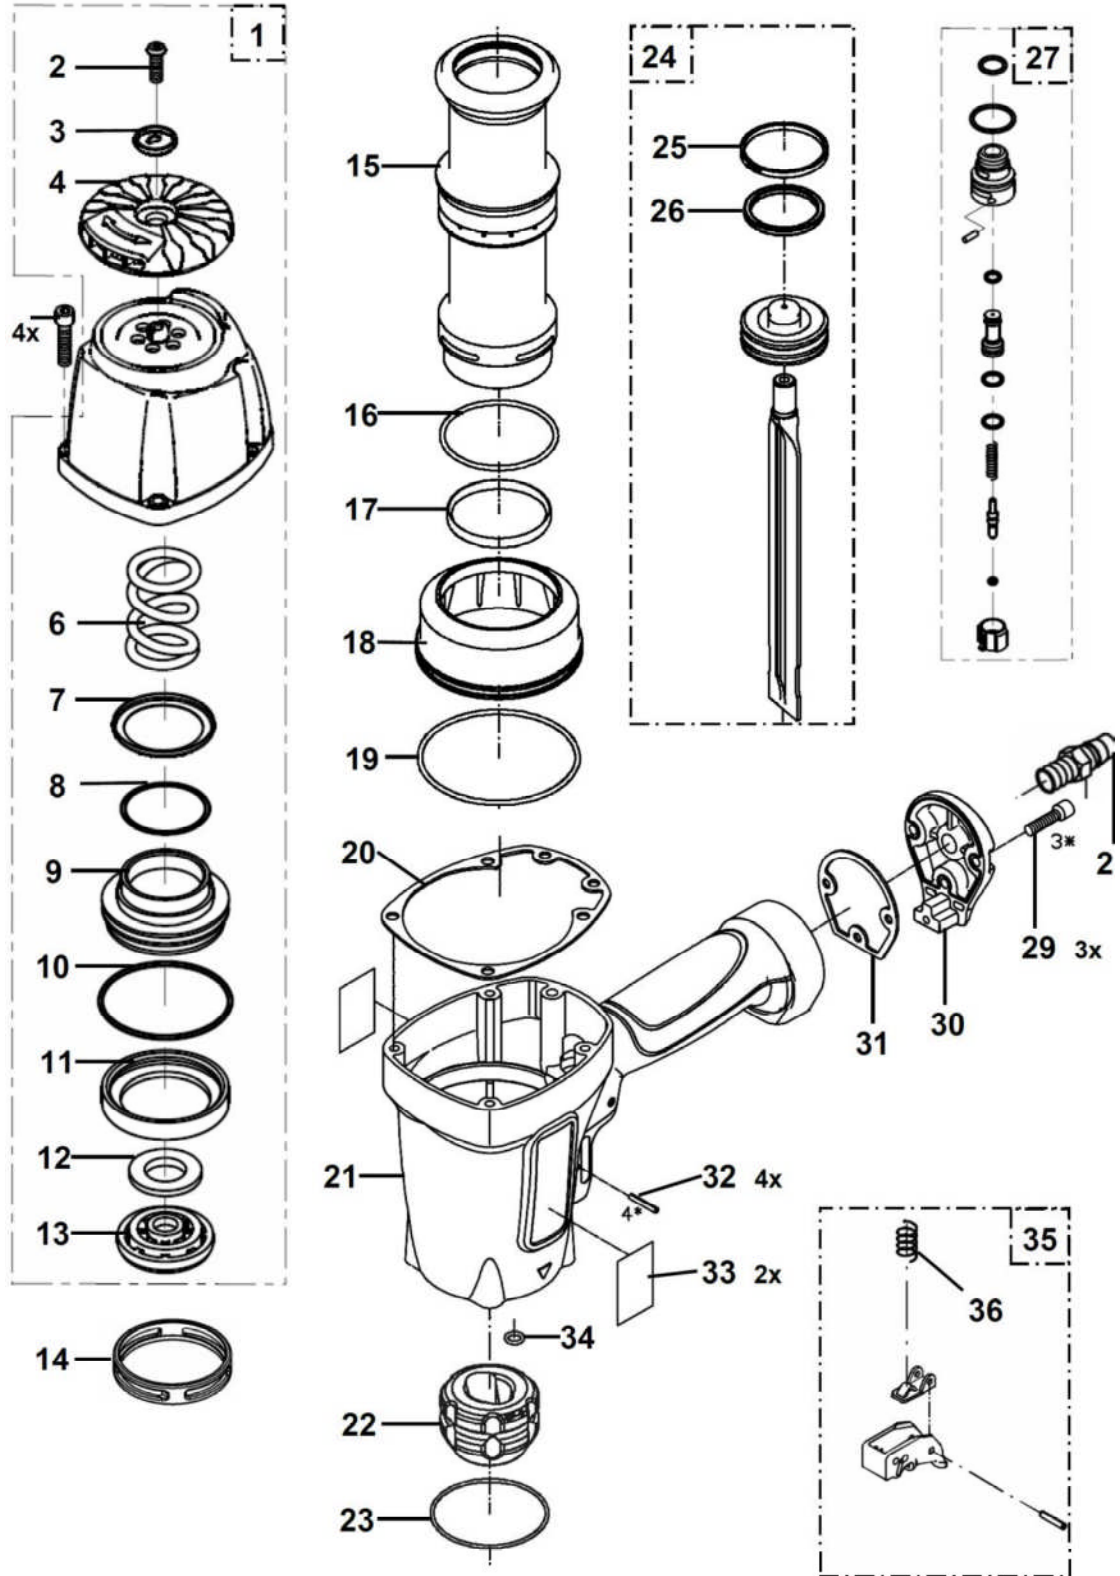

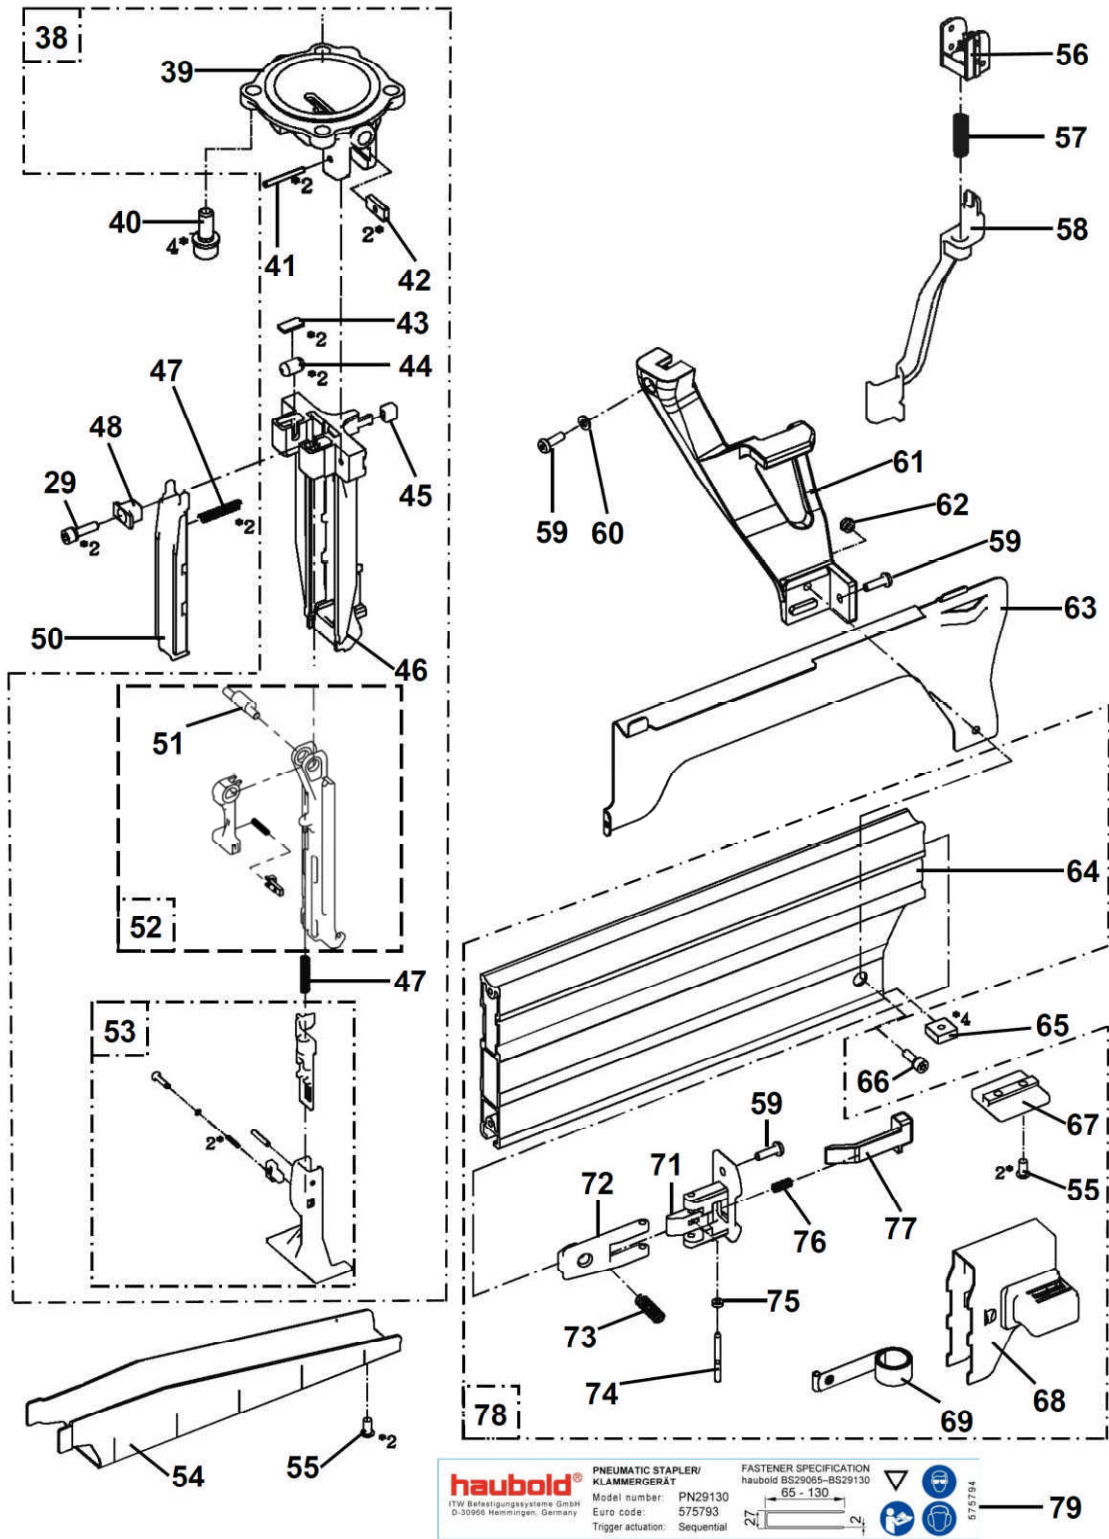

Plan Number	Eurocode	Description
001	617370	CAP CPL
002	613071	UM.HD.BOLT
003	574394	PLATE CNP
004	617367	EXHAUST CAP
005	617376	HEX.SOC.HD BOLT
006	613008	SPRING
007	613009	WASHER
008	613010	O-RING
009	613011	CONTROL PISTON
010	613012	O-RING
011	613013	SEAL
012	613014	PLAIN WASHER
013	617369	PISTON STOPPER
014	575680	CYLIN.PRESS.COLLAR
015	617651	CYLINDER
016	575677	O-RING
017	613114	CYLINDER RING
018	617372	COLLAR
019	613022	CNW70.1
020	574403	GASKET
021	617373	BODY
022	617652	BUMPER
023	613027	O-RING
024	617696	DRIVER ASS.
025	617648	PISTON RING
026	617649	X-RING
027	617659	SWITCH ASM.
029	574400	HEX.SOC.HD.BOLT
030	574401	COVER
031	574402	SEAL CNP
032	613031	ROLLED PIN
033	575642	LOGO LABEL HAUBOLD
034	617635	O-RING
035	617699	SEQ. TRIGGER ASM.
036	613053	SPRING
038	617694	BASE ASM.
039	617653	BASE
040	617636	BOLT
041	613122	ROLLED PIN
042	617657	PARALLEL KEY
043	617660	BUMPER PLATE
044	617661	DOOR BUMPER
045	617665	RUBBER PAD
046	617664	CHANNEL PLATE
047	617666	SPRING PN29130
048	617663	STAPLE GUID.BLOC.
050	617662	INNER STAPLE GUIDANCE
051	617667	EXCENTER
052	617697	FRONT PLATE ASM.

053	617698	DEPTH ADJ. ASM.
054	617692	LOW STAPLE GUID.
055	617691	UM.HD.BOLT
056	613055	TRIP GUIDE
057	617677	SPRING
058	617678	UPPER SAFET.LEV.
059	617654	UM.HD.BOLT
060	613433	FLAT WASHER
061	617655	MAGAZINE BRACKET
062	617656	LOCK NUT
063	617658	MAGAZINE COVER
064	617685	MAGAZINE
065	617688	NOT SPECIFIED
066	617689	HEX.SOC.HD.BOLT
067	617690	END SUPPORT
068	617686	PUSHER GUIDE
069	617687	SPIRAL SPRING ASM.
071	617680	MAGAZINE END CAP
072	617681	STOPPER
073	613060	SPRING
074	617684	STEPPED PIN
075	613034	RETAIN RUBBER
076	617683	SPRING
077	617682	PUSHER REL.BUTT.
078	617695	MAGAZINE ASM.
079	617700	MODEL LABEL
080	617735	SPRING